

# QuickStart Card

## Installing IAR Embedded Workbench™ using a stand-alone license

This QuickStart card describes how to install and activate IAR Embedded Workbench™ products with a **stand-alone license**.

For more detailed information, see the *Installation and Licensing Guide*, which is included on the product CD as the file `InstallationGuide.pdf`.

### STAND-ALONE LICENSE LOCKS

A **stand-alone license** is a single-user license, locked either to the computer where the software is installed (the default), or to a hardware lock (dongle). A **dongle** is a device you attach to the computer, which allows you to easily move the license to another computer. A dongle is part of the product package only if you have explicitly ordered it.

## The installation procedure

The IAR Embedded Workbench™ installation is a three-stage procedure:

- A** First you install the IAR software using a **QuickStart key**, which allows you to use the product for 30 days.
- B** During this 30-day period, you must activate your license by registering the product with IAR Systems. Within 5 business days, you will receive a **permanent key** for your license.
- C** Finally you install the permanent key. This opens up the product for permanent usage.

Follow the detailed steps below for each stage.

## A. Installing the software

- 1** Insert the IAR Embedded Workbench™ installation CD. The installation program should start automatically. If it does not, run the `autorun.exe` program from the CD.
- 2** Select **Install the IAR Embedded Workbench™**.
- 3** You must accept the license agreement when prompted. By clicking the **Accept** button, you confirm that you have read and understood the license agreement.

- 4** Enter your name, company, and the 17-character license number printed on the CD cover:

Name:

Company:

The license number can be found on the CD cover.

License#:

- 5** Enter the 16-character QuickStart key printed on the CD cover:

License #:

License Key:

- 6** Select the type of license lock you wish to use, either **My computer** or **Hardware dongle**:

My computer (Default)

Hardware dongle

Lock type information

My Computer.

The license will be locked to the computer on which this product is installed.

If you choose **Hardware dongle**, you must now attach the dongle to the computer.

- 7** Accept the default installation directory or specify a directory of your choice:

Destination Folder

C:\Program Files\IAR Systems\Embedded Workbench x.x

Browse...

- 8** Select either a **Full** or a **Custom** installation:


Full All components will be installed. Recommended for most users.

Custom You may choose the components you want to install. Recommended for experienced users.

If you choose **Custom**, select the components you want to install in the next dialog.

(Continue on the next page)

- 9 Select where to place the IAR Embedded Workbench™ icons in the Windows **Start** menu:

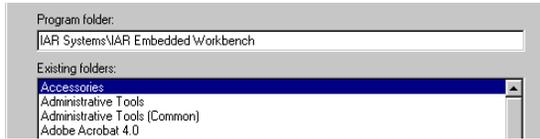

- 10 Review the settings for the installation and click **Next** to install the program files.


- 11 If you have selected **Hardware dongle**, follow the instructions on the screen during the installation of the dongle drivers. You might be asked to reboot your PC. In that case *Activation step 1* described below will start automatically after the reboot.

At this point, you can use the IAR product for a limited period of 30 days. To open up the product for permanent usage, you have to **activate** the license: first you register the product with IAR Systems to receive a permanent key, and then you install the permanent key.

If you do not register the product, you will be **unable to run the software** after the 30-day period.

## B. Activation step 1: Registering the product

- 1 When the program files have been installed, a license activation program is started. Click **Next** to enter the requested information, and select how to register:

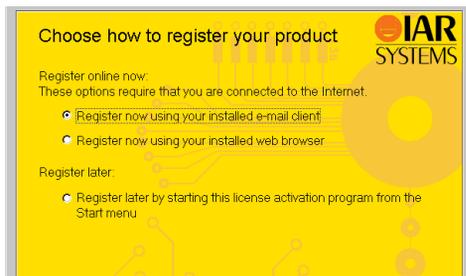


- 2 Send in your registration now or later:
- If you choose to register now via email, an email message is automatically sent to IAR Systems.
  - If you choose to register now via the web, make sure to **Submit** the resulting web page to IAR Systems.
  - If you choose to register later, the information you entered is saved in the `registration.txt` file in the installation folder. However, you must remember to run the license activation program at a later time to send this file to IAR Systems.
- 3 Finish the installation program.

## C. Activation step 2: Installing the permanent key

Within 5 business days after sending in your registration, you will receive the permanent key via email. Install it as follows:

- 1 Select and copy the permanent key from the email message, according to the instructions in the message.
- 2 Start the **IAR Systems License Manager** from the **Start** menu. In the License Manager window, click the **Install License** button.

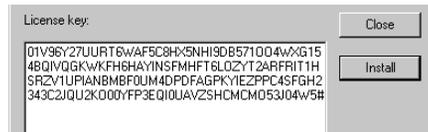

- 3 Enter or paste the permanent key into the text field.
- 4 Click **Install**.

You are now finished with the IAR Embedded Workbench™ installation.

**Important:** Read the note about license transfer in the *Installation and Licensing Guide*.

### IN CASE OF PROBLEMS

If you have problems concerning the installation or license:

- Read the detailed *Installation and Licensing Guide*, included on the product CD as the file `InstallationGuide.pdf`
- Check the technical notes on the Technical Support pages on the IAR website: [www.iar.com](http://www.iar.com)
- Contact your IAR software distributor. If they are unable to assist you, contact IAR Technical Support. Refer to the product box for address information.